Universal MotorLock

DEADBOLT - UR40•60 Technical Manual

CHARACTERISTICS

The Universal MotorLock can be mounted in all four mounting directions. The Leader Electronics feature Master (8-digits), Service and Main (6 or 7-digits) code levels. Each code can be changed by the user. With the main code up to 40 secondary codes (6 or 7-digits) can be activated and deleted. Dual mode, time delay, time lock and Dallas key identification are available optional functions. If a valid code has been entered, the lock electronic retracts the lock bolt and keeps it in open position for 5 seconds while the boltwork can be moved into OPEN position. When moving the boltwork back to LOCKED position the Universal MotorLock automatically secures.

ENTRY UNITS

Universal MotorLock UR40-60 is compatible with the following NL LOCK Entry units (separate technical descriptions for Entry units are available). Entry unit cable hole on the safe door does not have to exceed 11 mm diameter

Leader LI20xx	LockONE TE20xx

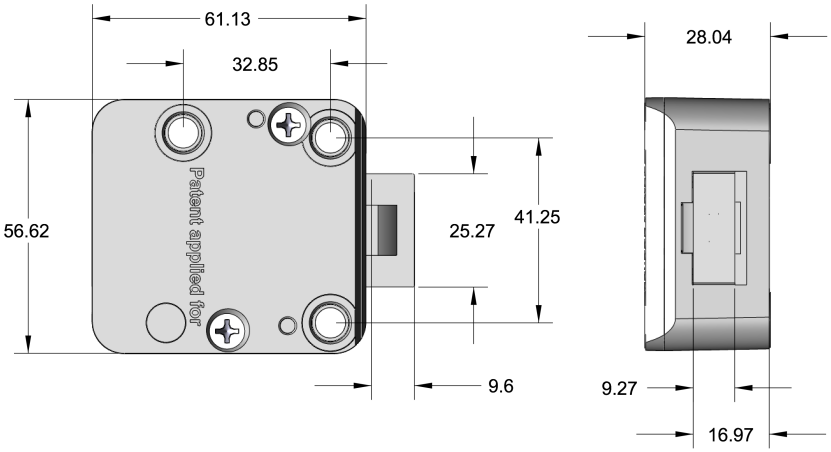

Important:

- Modifications to the lock (including lock bolt attachments) are not allowed, and will void the manufacturer's warranty and Standards approvals.
- No through holes on the safe door are allowed within the lock body area.
- Lock body area should be protected against destructive attacks

© 2019 Lock Technology

BOLTWORK REQUIREMENTS and MOUNTING INSTRUCTION

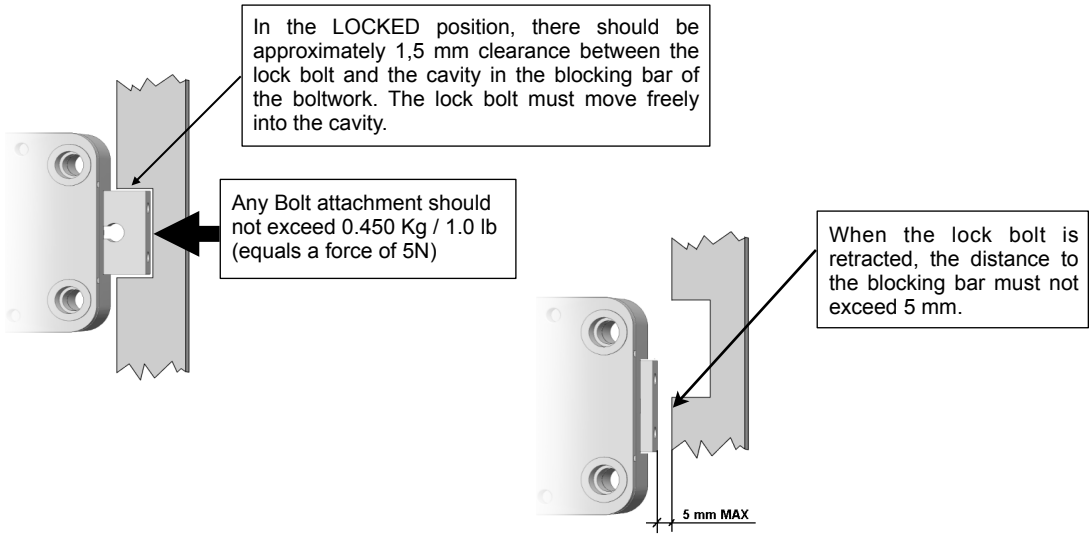

If the Universal MotorLock is used in conjunction with another lock, the boltwork must be constructed in a way that the Universal secures first.
In the LOCKED position the distance between the Universal bolt and the boltwork part that is moving the lock bolt should be approximately 1.5 mm.
Only use NL LOCK supplied screws (M6) to mount the lock. Lock has to be mounted on secure storage metal (preferred steel) units only. Tighten the screws securely so the lock body is attached firmly to the mounting surface. Use of screw locking glue (i.e. Loctite) is recommended.
Security relevant parts of a HSL should not be accessible to unauthorized persons when the door of the secure storage unit to which it is fitted is open

Test Electronics
Like all locks from NL LOCK this unit includes a unique feature to functionally test the electronics:
Function #5

STEP	TASK	REMARK
1	Press and hold [5] until a double signal sounds and the light stays ON.	
2	Enter the all keys in exactly this sequence: [1]-[2]-[3]-[4]-[5]-[6]-[7]-[8]-[9]-[0]	Push buttons slowly so you recognize the signaling of the lock. A double signal indicates that the keypad and the lock communicate and perform properly. A long signal indicates that the electronics may be damaged.

Functional Test

- Enter code (i.e. 1-2-3-4-5-6). The lock emits a double signal for the correct code.
- Turn boltwork handle towards OPEN position.
  The bolt rotates into the housing. Bolt must move freely.
- Turn handle towards Locked position.
  The lock bolt fully extend and secure, double beep to confirm secure condition.
- Make sure there is an air space on all sides of the lock bolt when the safe's boltwork is fully thrown into locked position.

IMPORTANT: Perform the functional test several times before locking the safe door.

© 2019 Lock Technology